


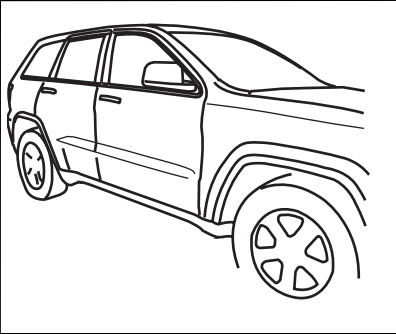

# JEEP GRAND CHEROKEE

TUBULAR SIDE STEPS  
EL LADO TUBULAR DA UN PASO  
LES ETAPES LATERALES TUBULAIRES



M6



**A** 12x




**B** 6x

M8




**C** 6x

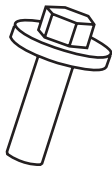


**D** 6x




**E** 12x

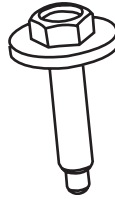


**F** 12x

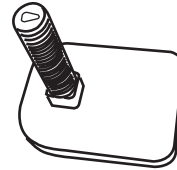


**G** 6x

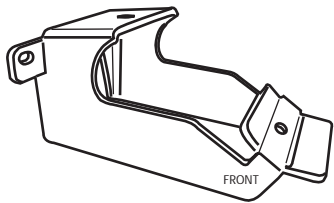

**H1** 2x

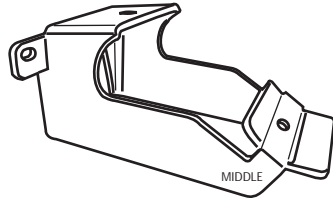

**H2** 2x

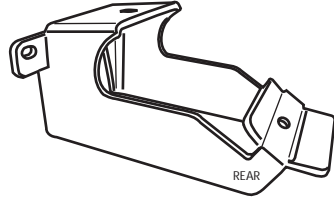

**H3** 2x





REAR  
TRASERO  
ARRIERE



PASSENGER'S SIDE  
LADO de PASAJERO  
COTE DU PASSAGER

FRONT  
FRENTE  
DEVANT



**I** 2x

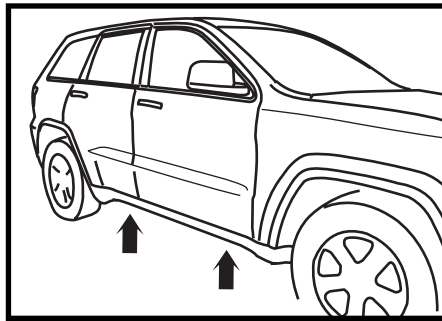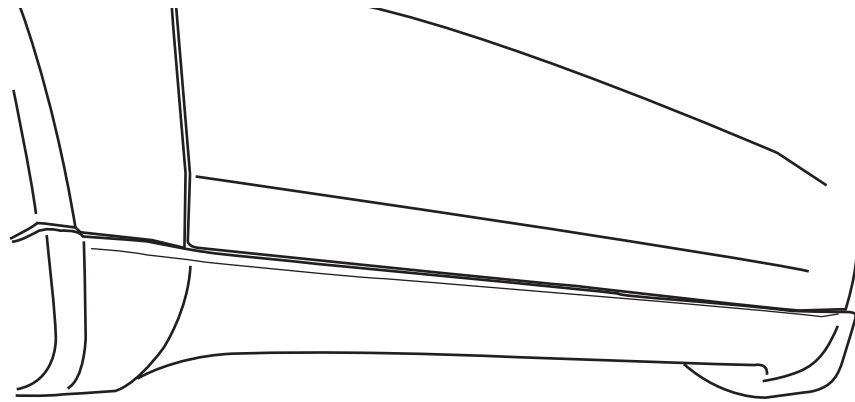


1


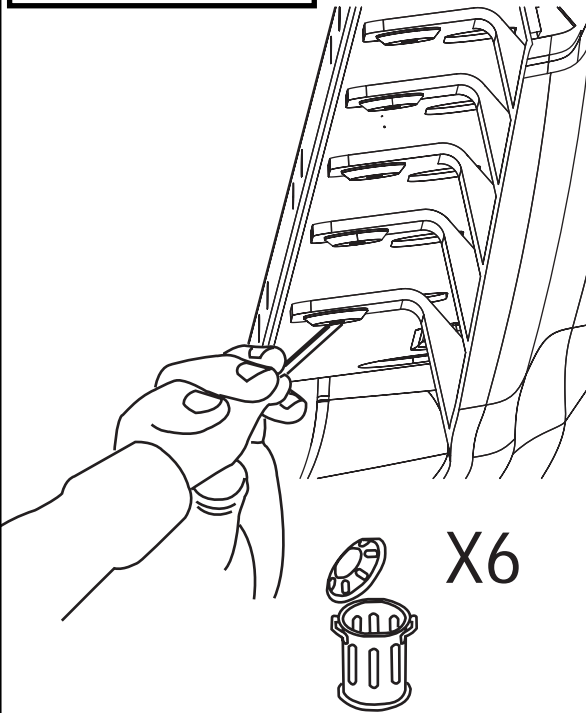
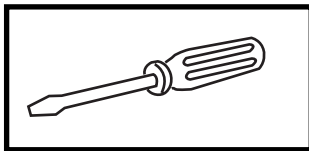


2

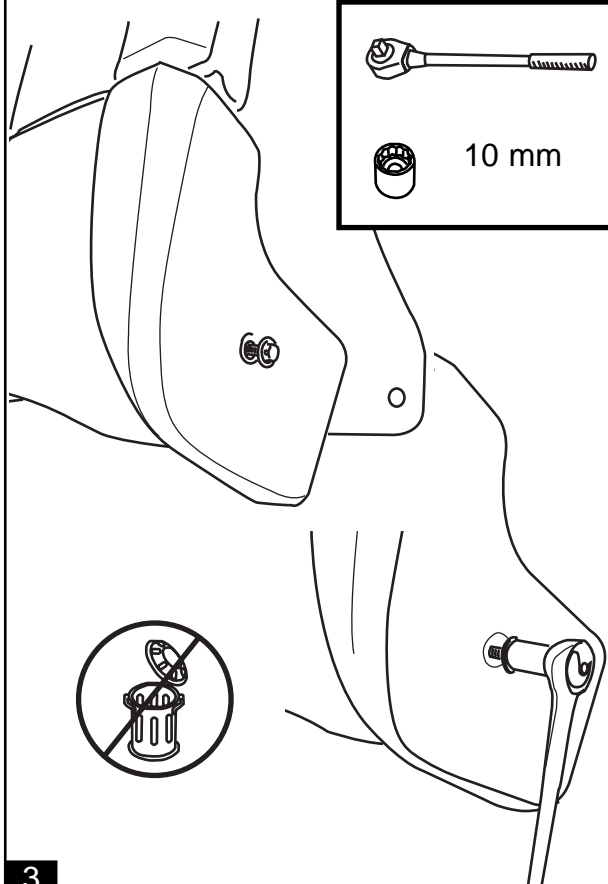
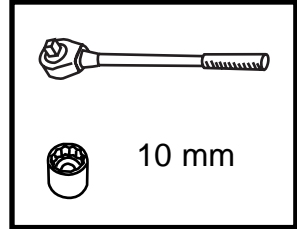


3

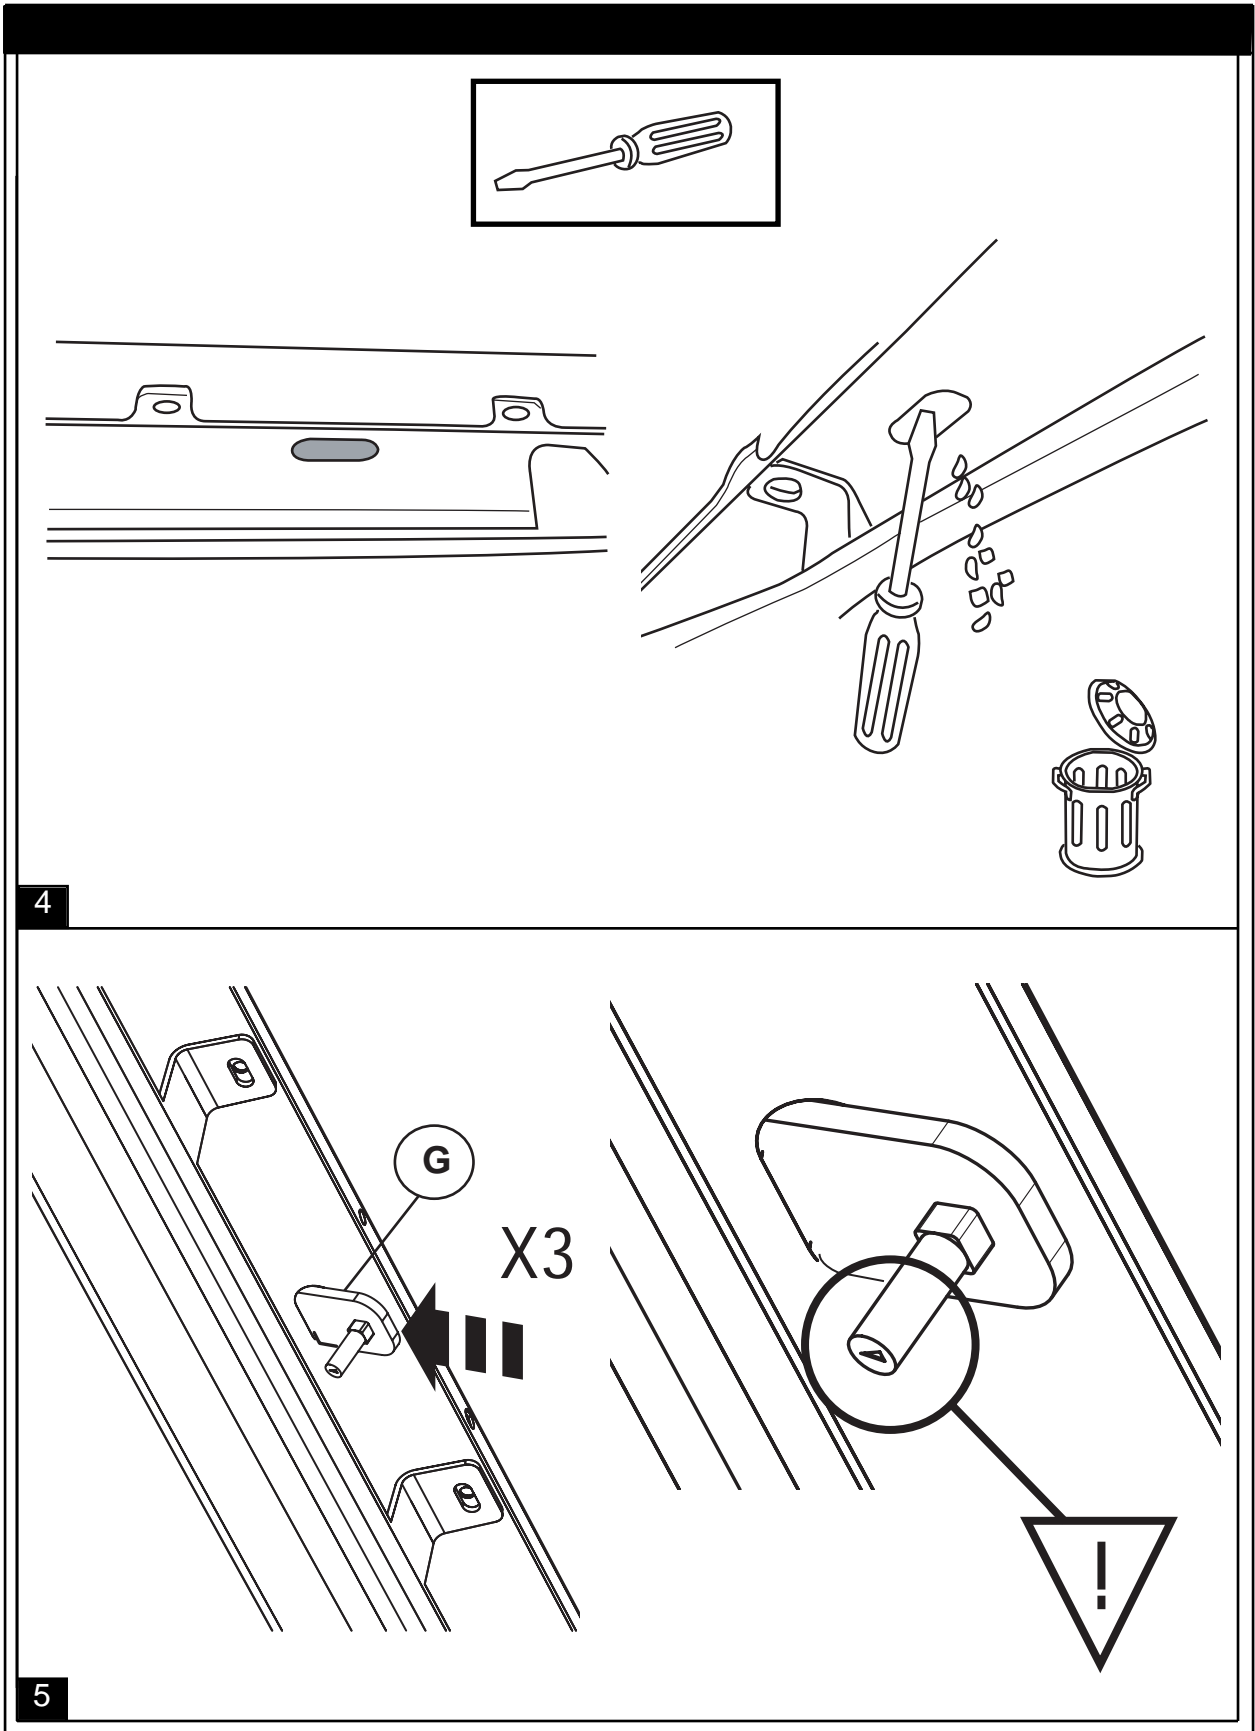


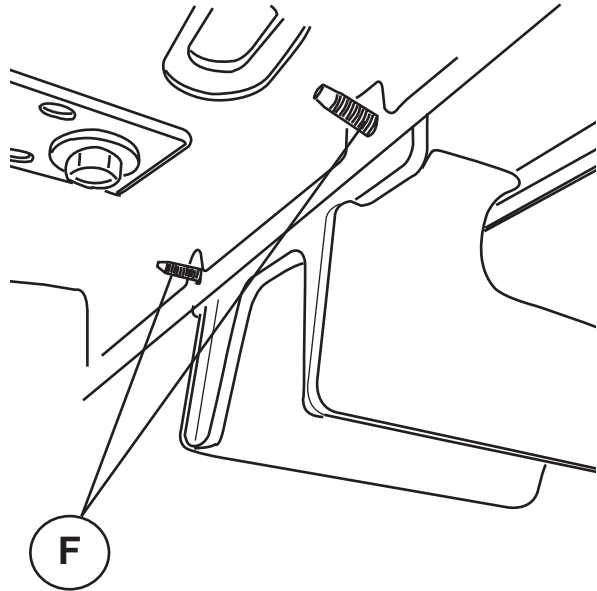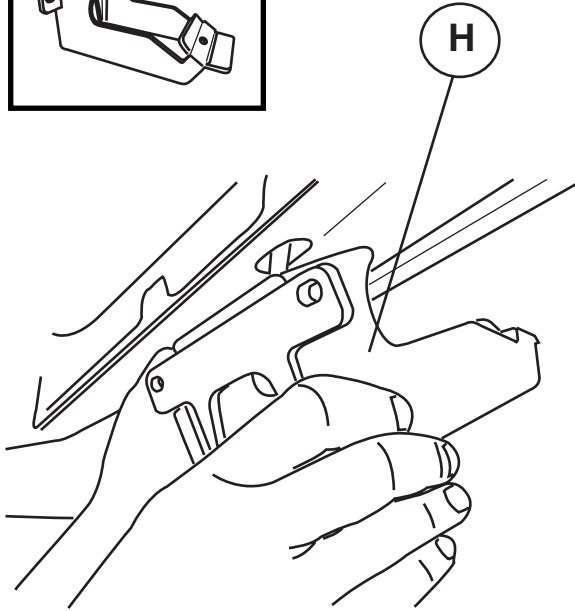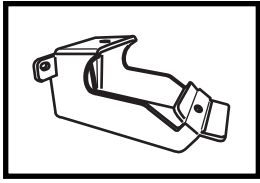


6

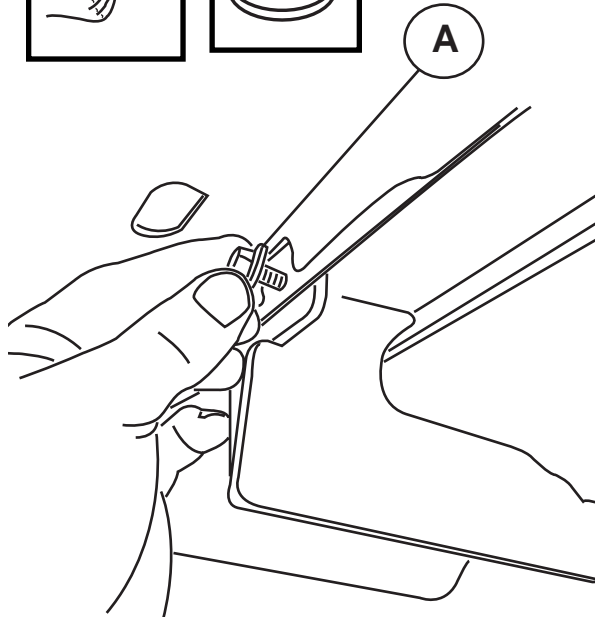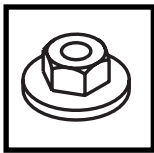


10 ft-lbs (120 in-lbs)

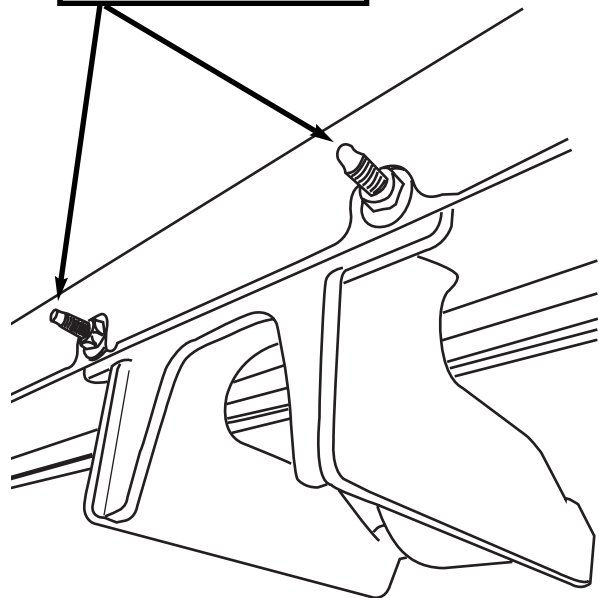


7

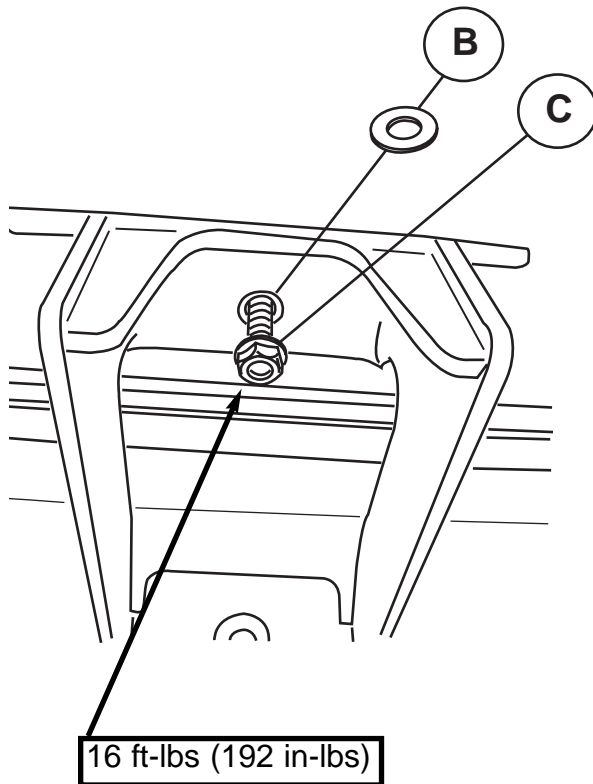

8

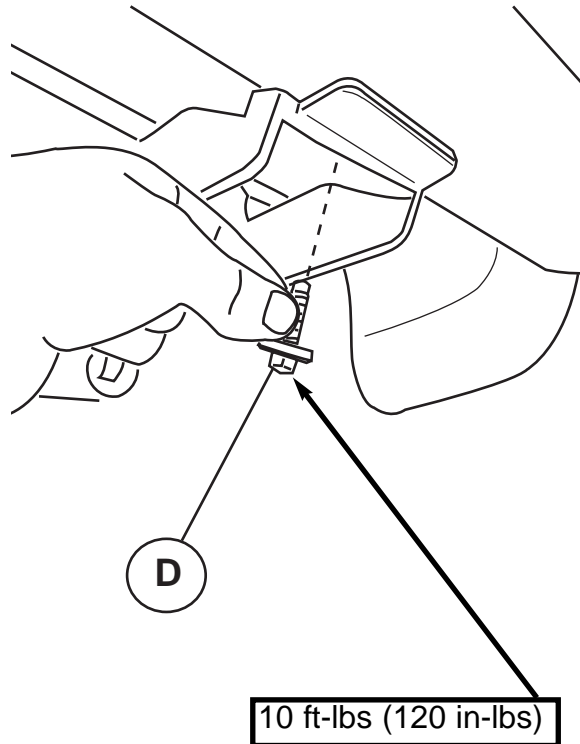

9


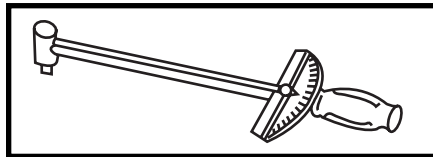


Tighten all M8 fasteners to 16 ft-lbs. (192 in-lbs.) (22 N.m). Tighten all M6 fasteners to 10 ft-lbs. (120 in-lbs.) (13.5 N.m). Repeat for Driver's side.  
CAUTION - Do Not Over-torque



Apriete todos M8 clerres a 16 ft-lbs. (192 in-lbs.) (22 N.m). Apriete todos M6 clerres a 10 ft-lbs. (13.5 N.m). (120 in-lbs.) Repita el lado de pasajero.  
Precaución: No apriete demasiado

Resserrer tous M8 fermoira pour 16 ft-lbs. (192 in-lbs.) (22 N.m). Resserrer tous M6 fermoira pour 10 ft-lbs. (120 in-lbs.) (13.5 N.m). Répéter pour le côté du chauffeur.  
Attention: Ne pas surcoupler


10

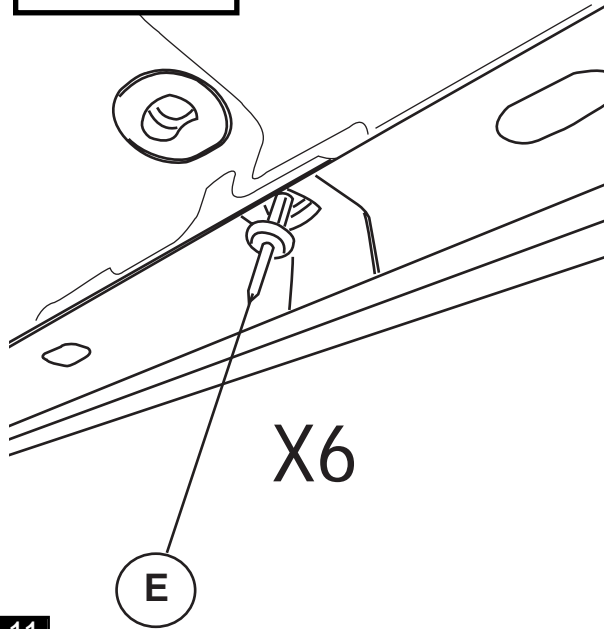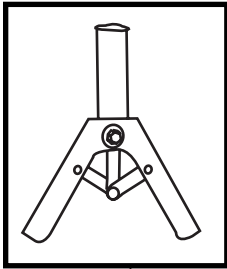

11

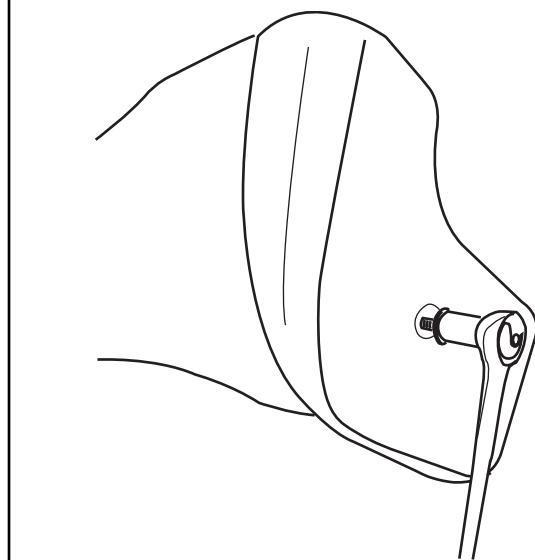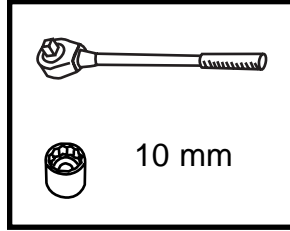

12

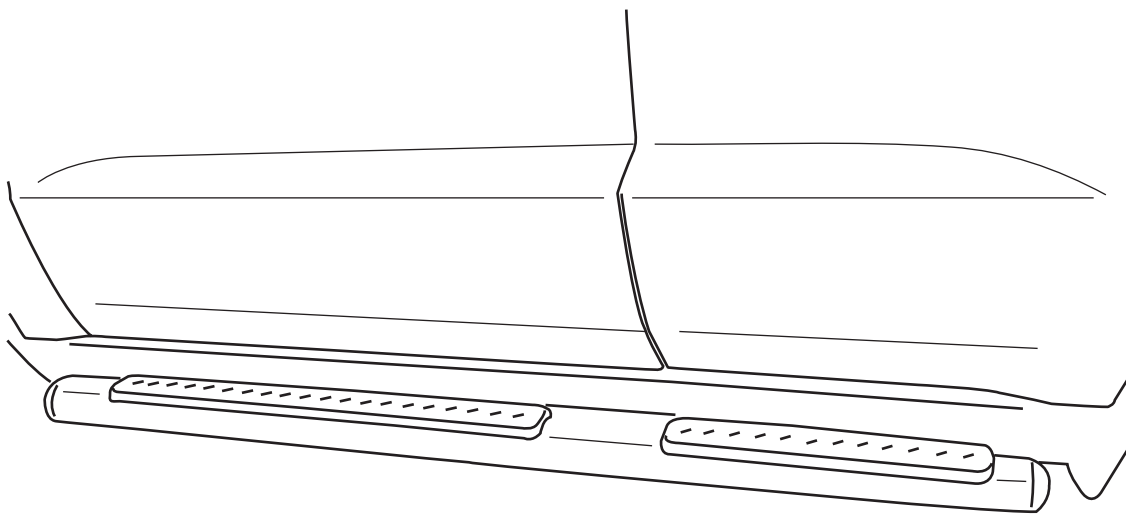

13